




T1000,T1001-BESPOKE BRACKETS

FORD TRANSIT CUSTOM L1/L2 23-
VOLKSWAGEN TRANSPORTER T7 L1/L2 25-

T1000 - LEFT SIDE
T1001 - RIGHT SIDE




A: 997 mm (L1), 1389 mm (L2)

B: 997 mm (L1 & L2)

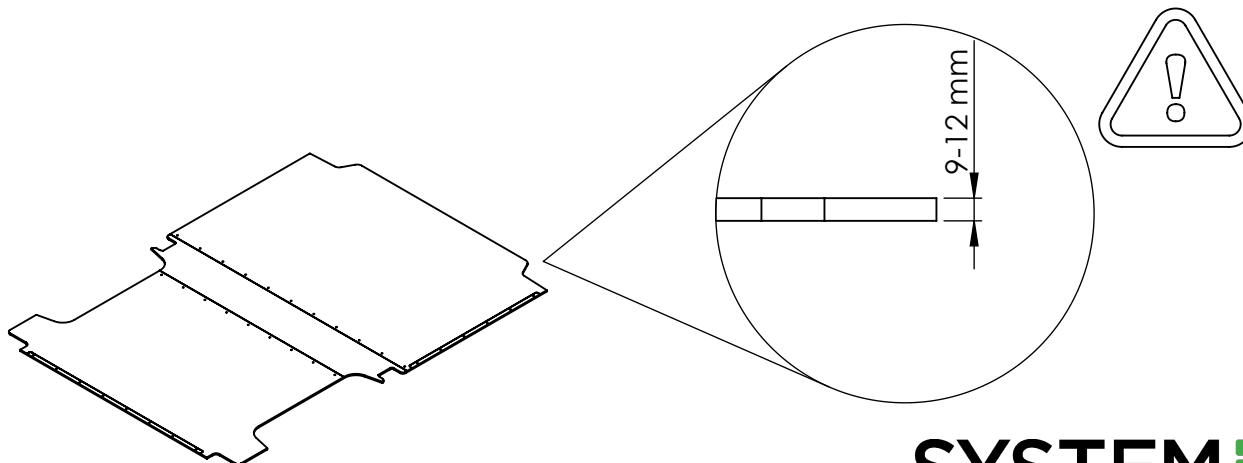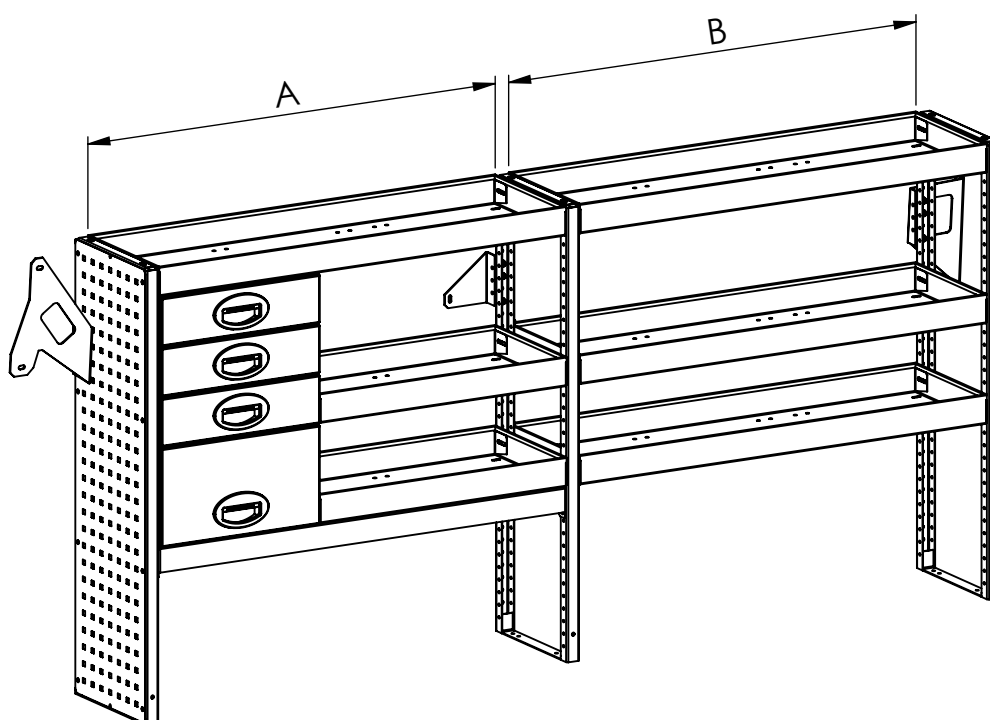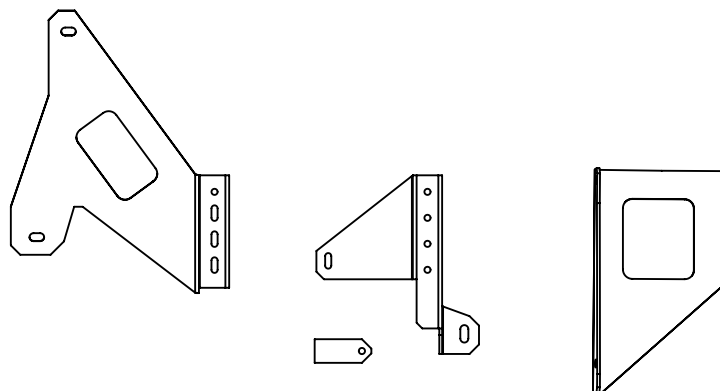


SYSTEM 
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS

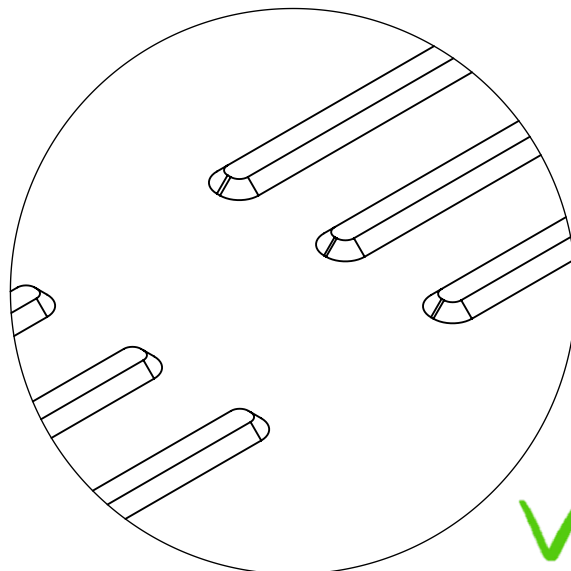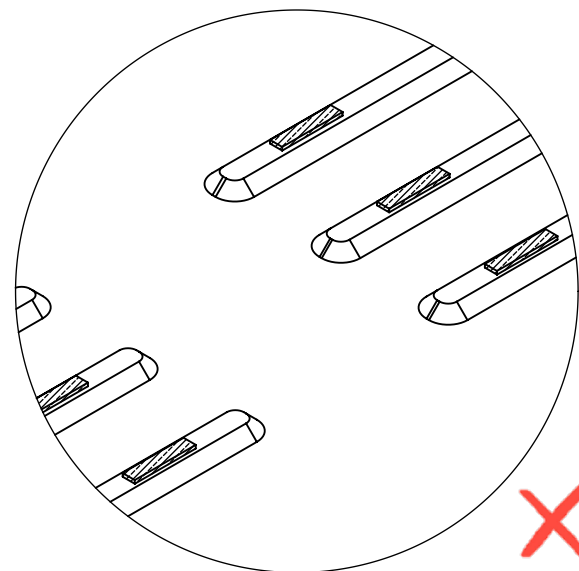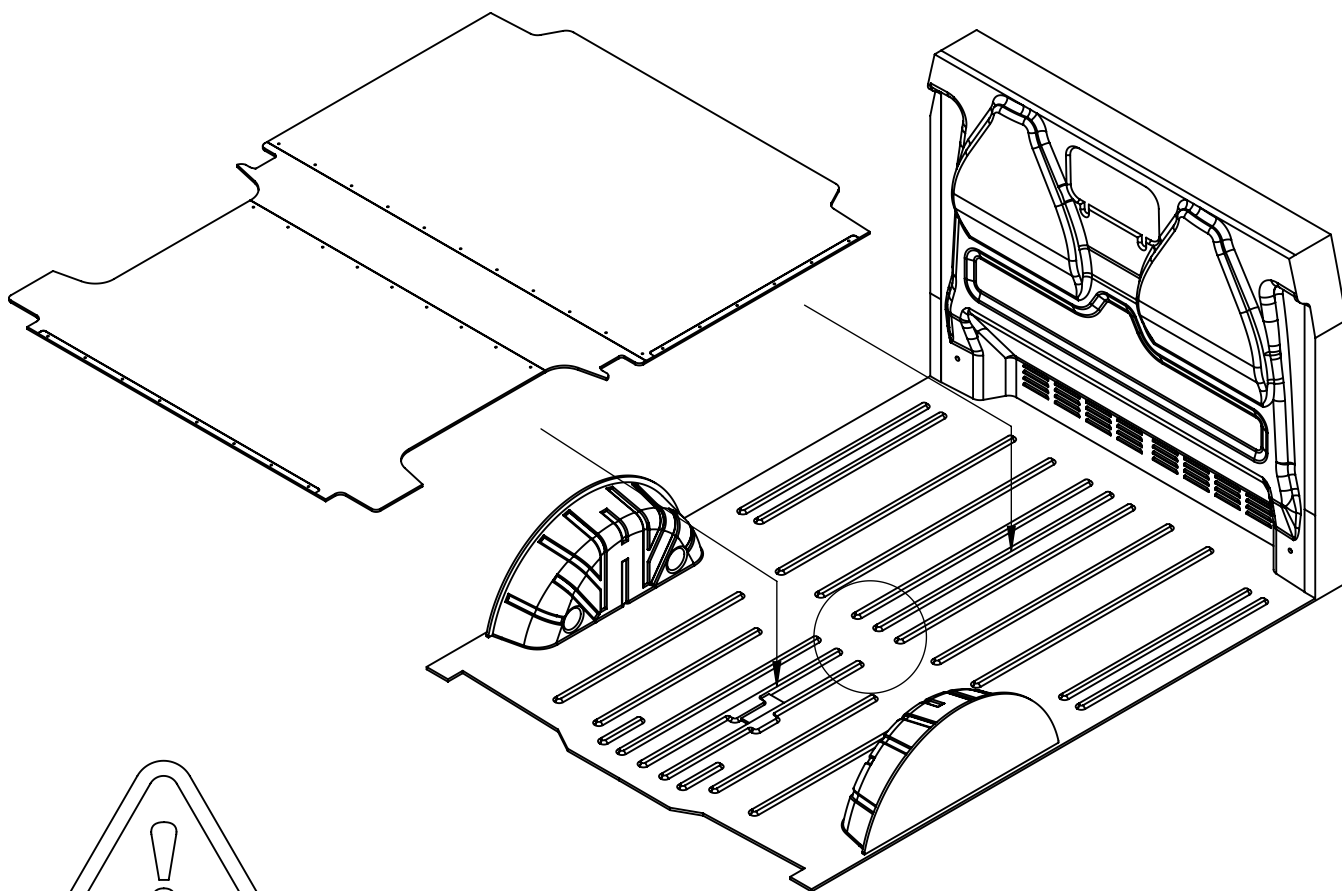



SYSTEM 
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS

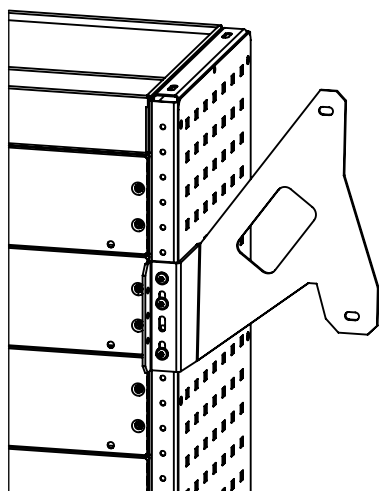



1000 mm

2006
2007
2020
2021

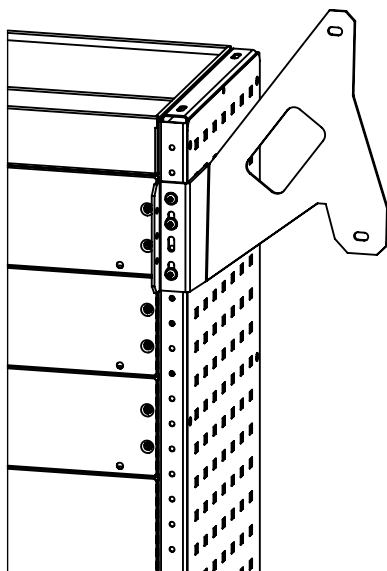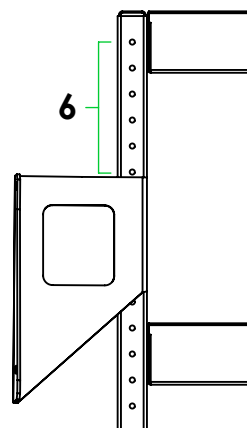


890 mm

2004
2005
2018
2019

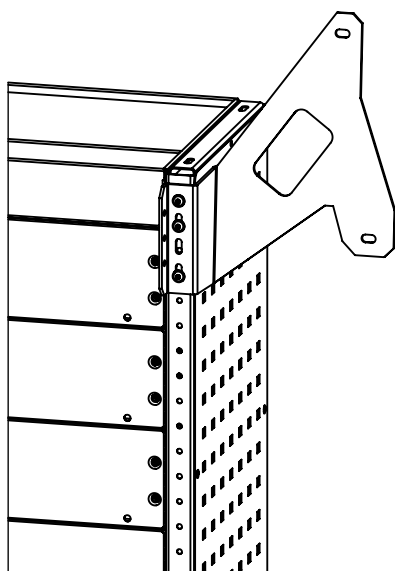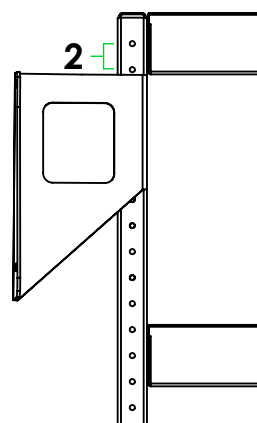

825 mm





2016

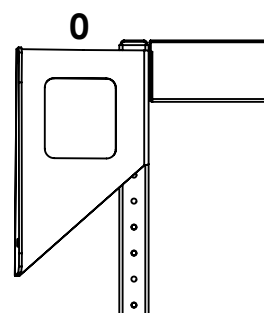


SYSTEM 
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS

1

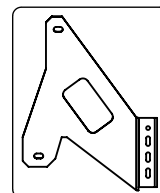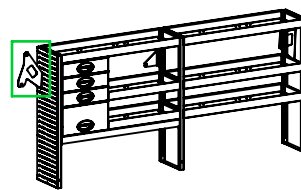
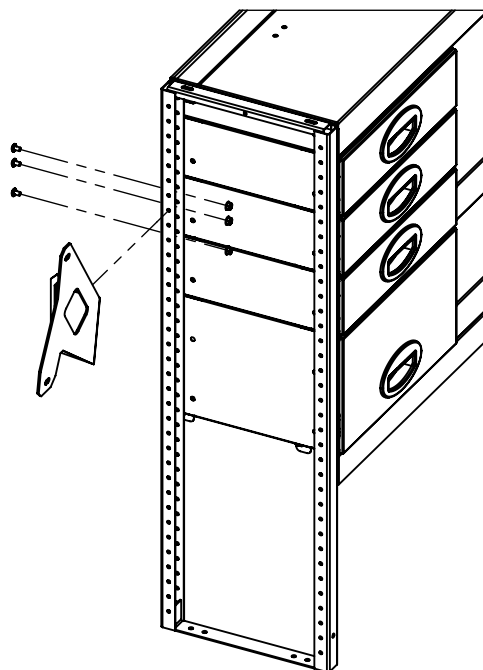


5600



5640

2


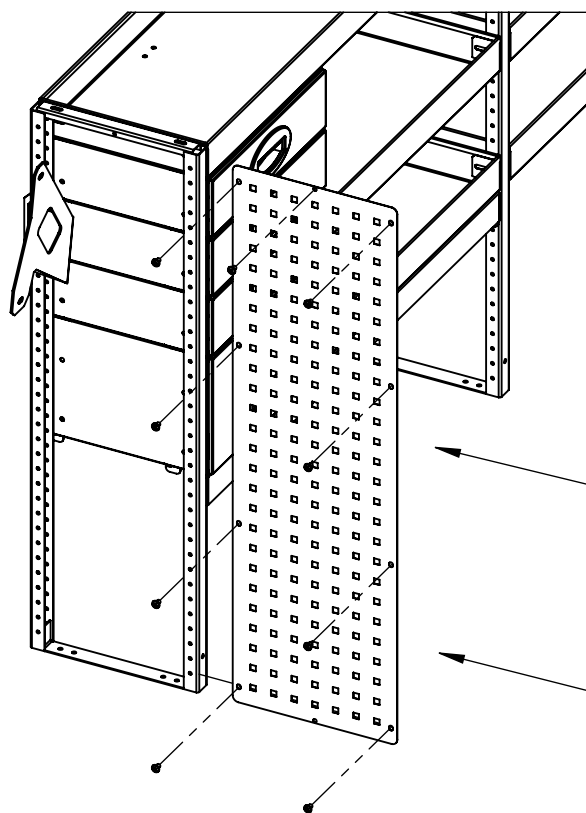


5600


SYSTEM 
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS

3



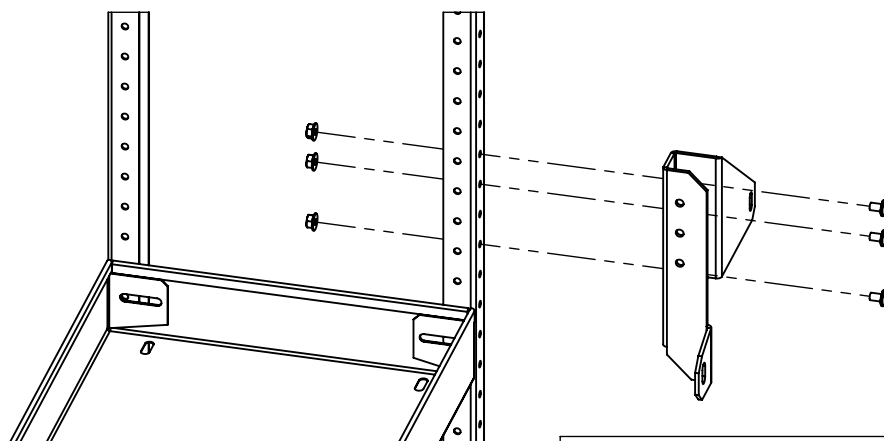


5600



5640


4

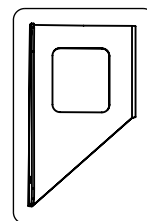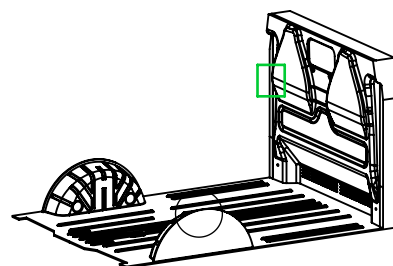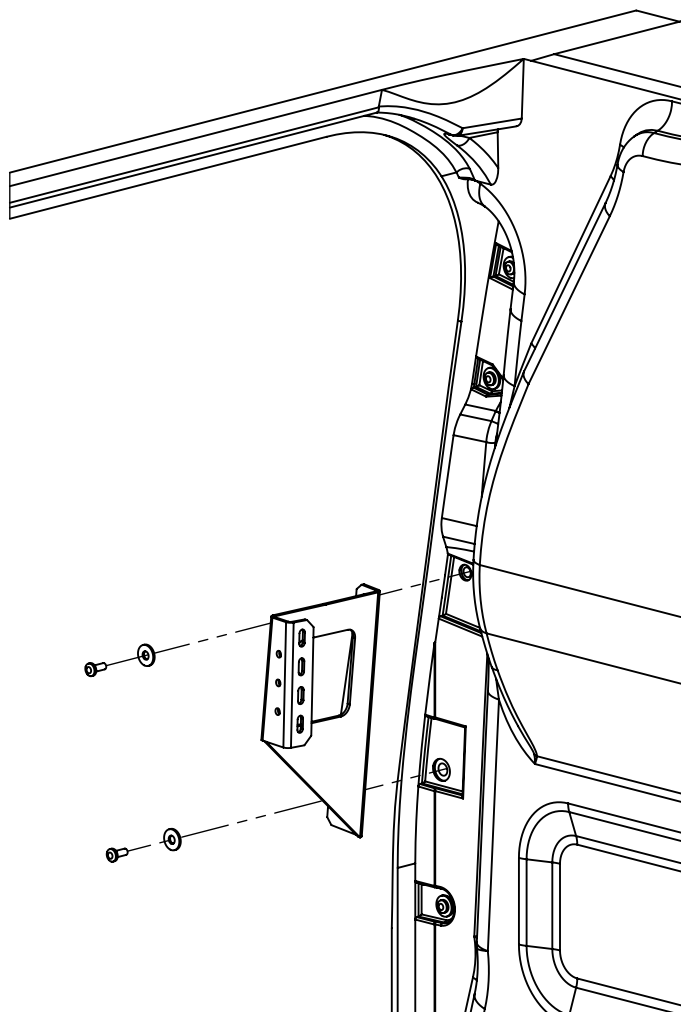




SYSTEM 
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS

5

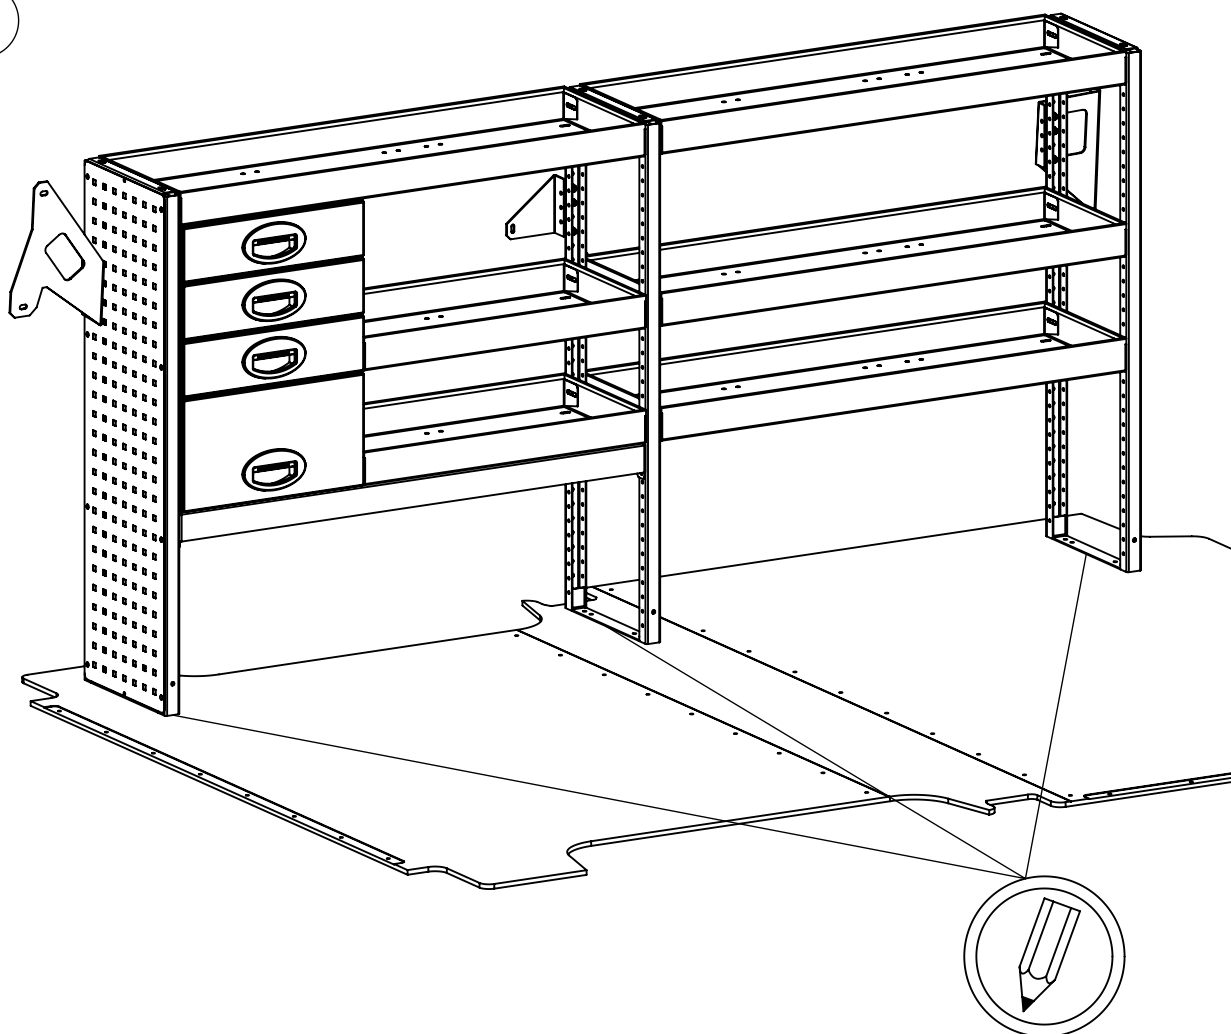



6

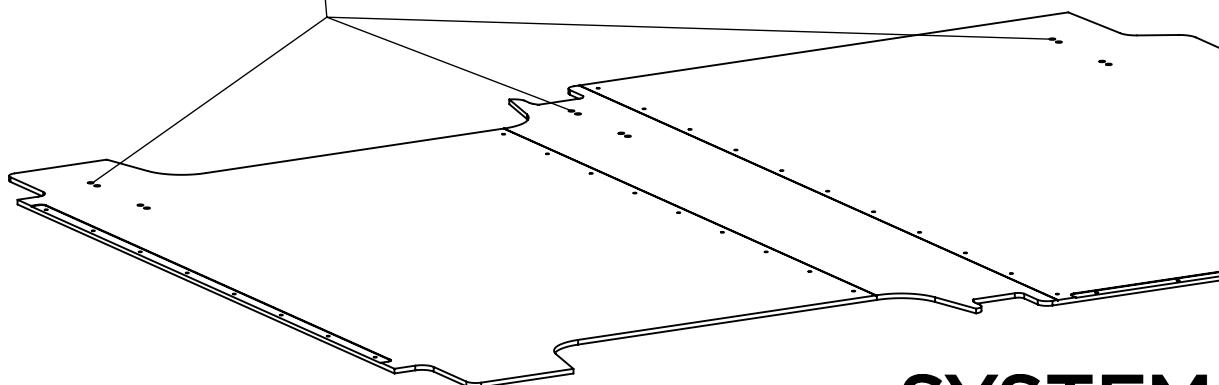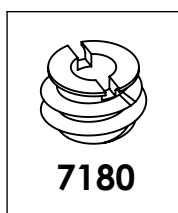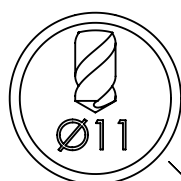


SYSTEM
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS



7

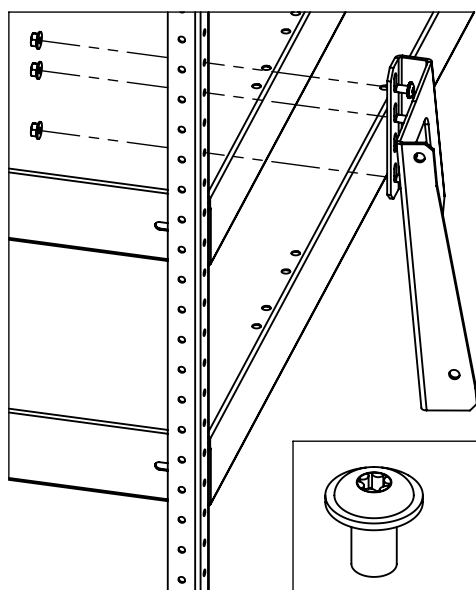




5600




5640

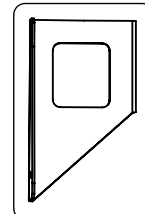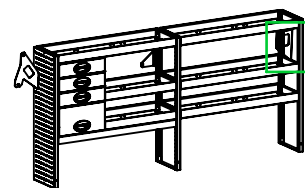

8

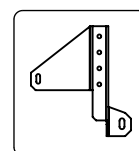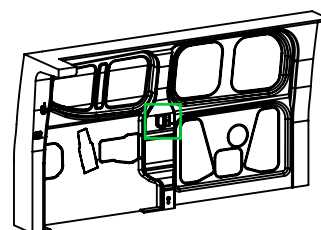


5612



1001986



5642

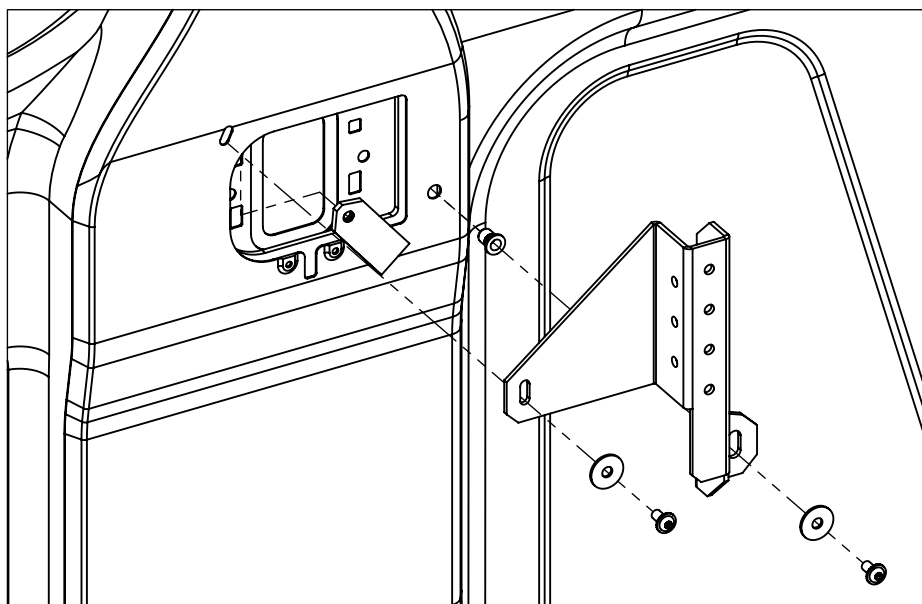

5612



7153






5642

SYSTEM 
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS

9

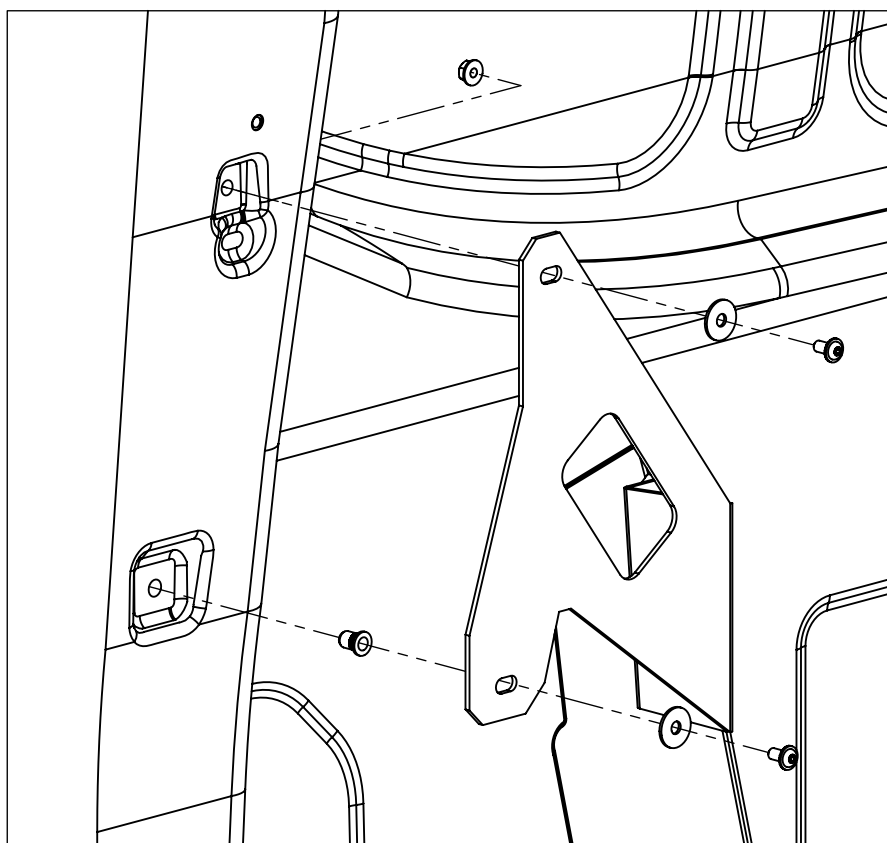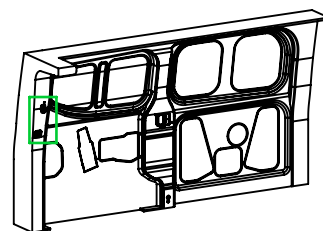


5612



7153



5642

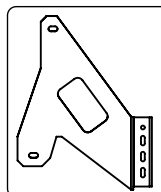

5612





5640



5642

10

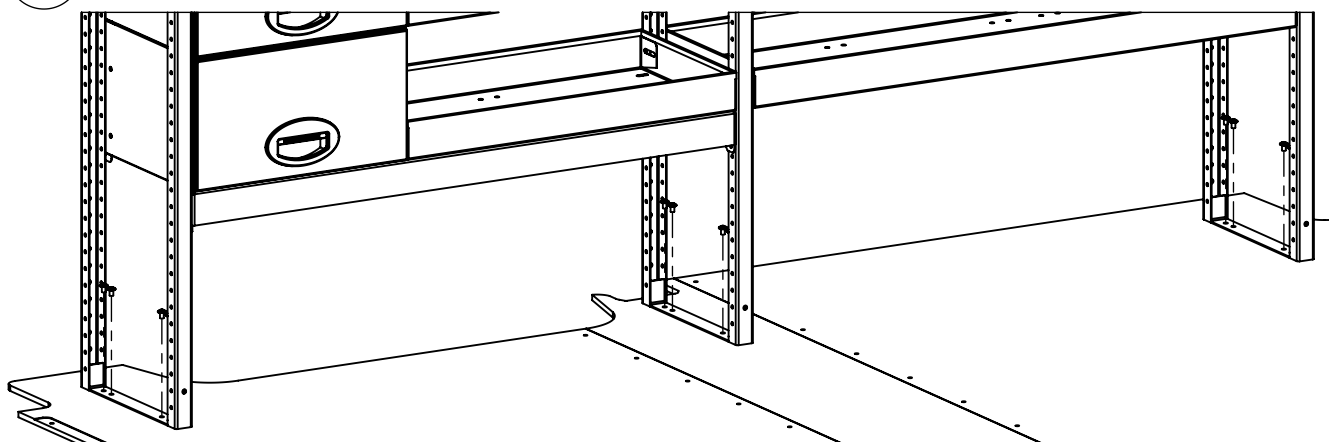


5600

SYSTEM 
EDSTRÖM

T1000,T1001-BESPOKE BRACKETS

A: 2884 (L1), 2888 (L2)

B: 2884 (L1 & L2)

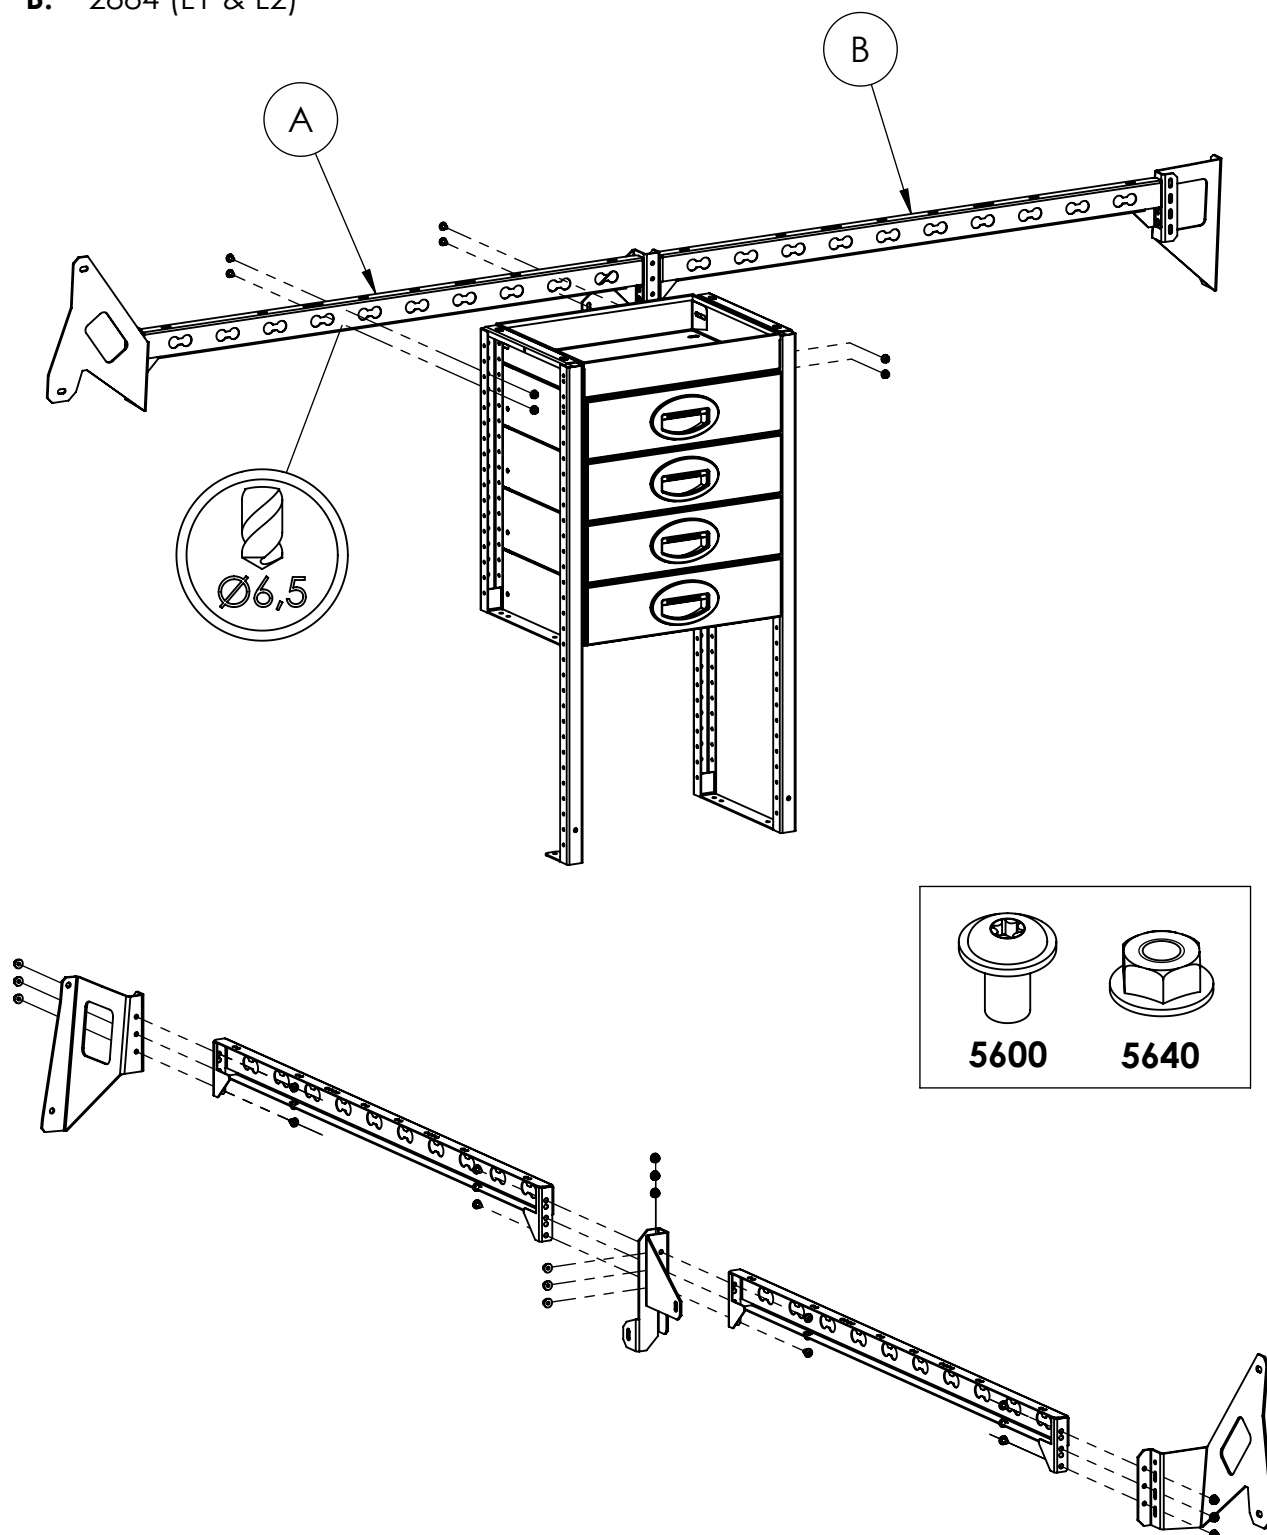

SYSTEM 
EDSTRÖM