


HOW TO FIT LADDERS IN THE T9000


1

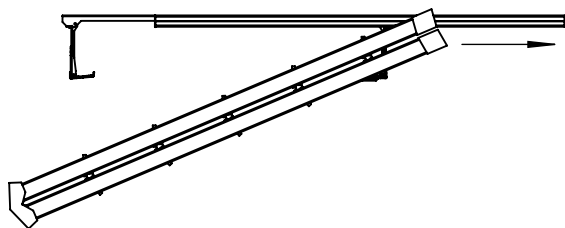


2




3

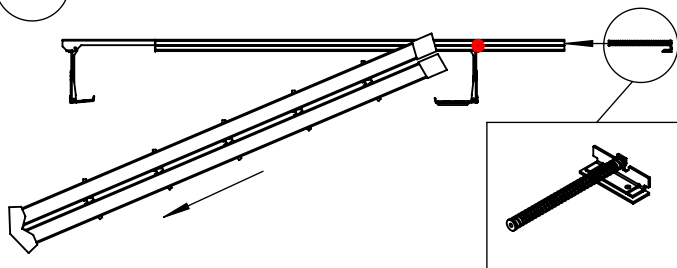

4


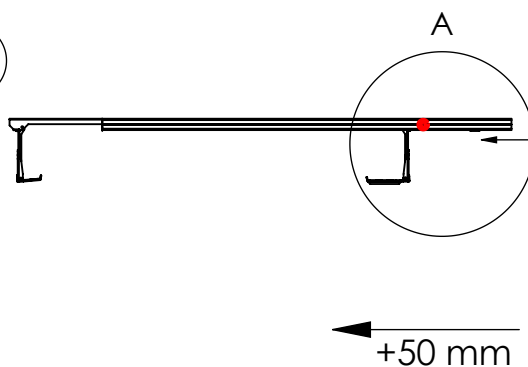


5

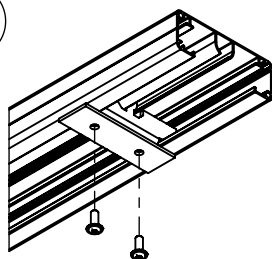

DETAIL A


Zarges XLstep B (or similar)

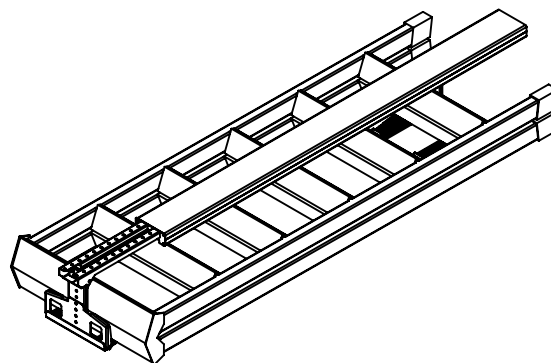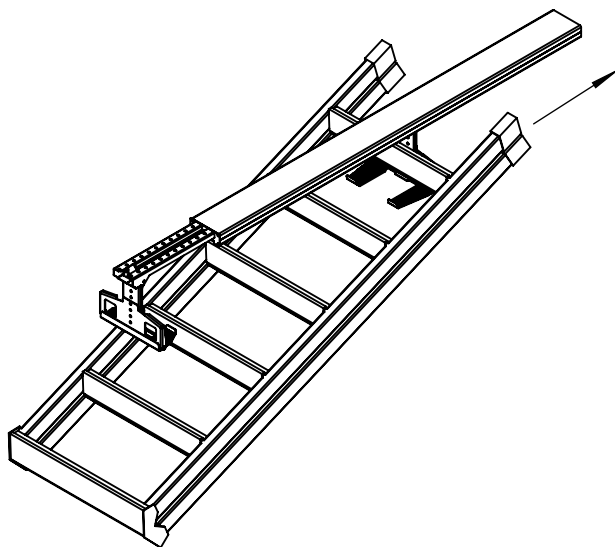



SYSTEM 
EDSTRÖM

HOW TO FIT LADDERS IN THE T9000



Zarges XLstep S (or similar)

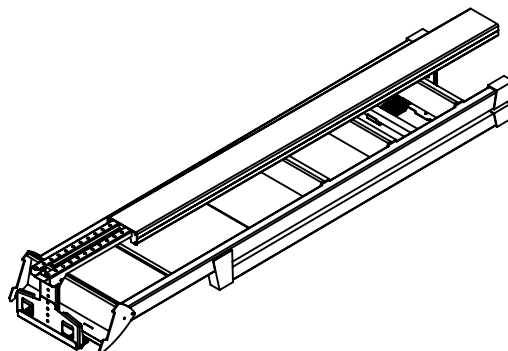

W.Steps 55P (or similar)



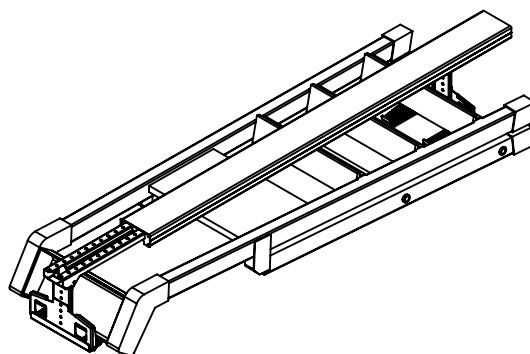
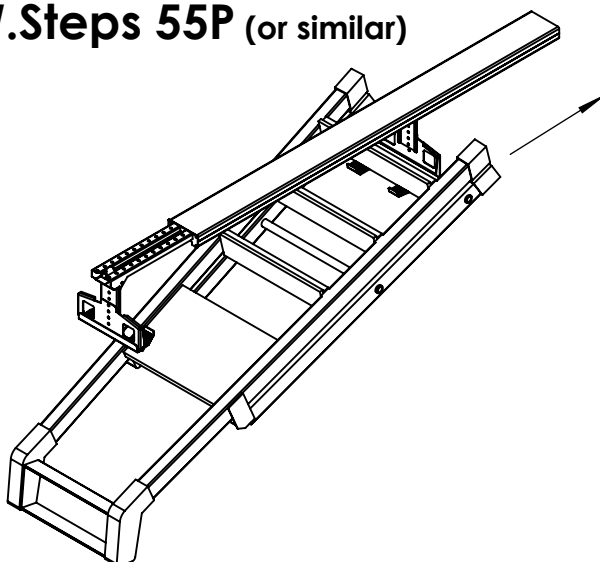


Werner ProSmart (or similar)

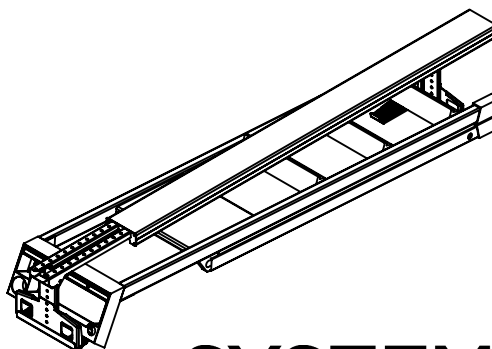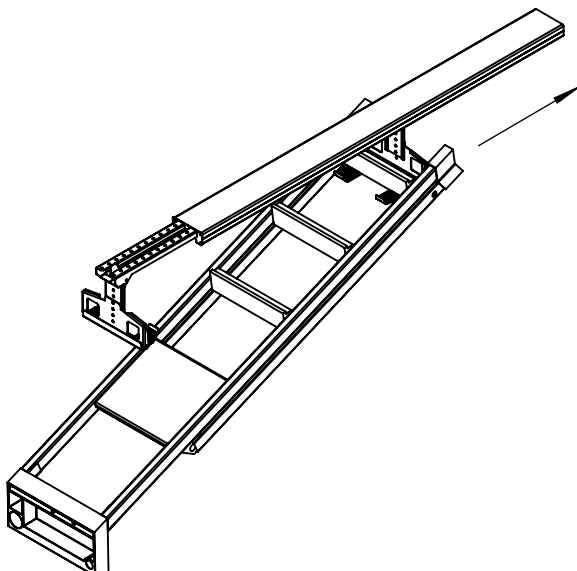

SYSTEM 
EDSTRÖM

HOW TO FIT LADDERS IN THE T9000

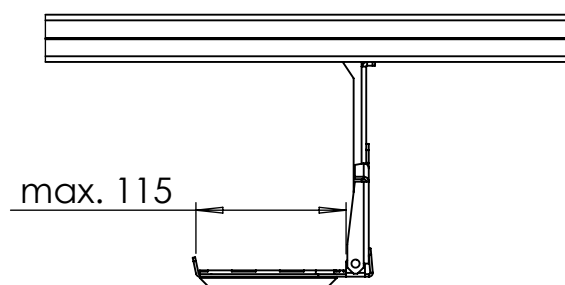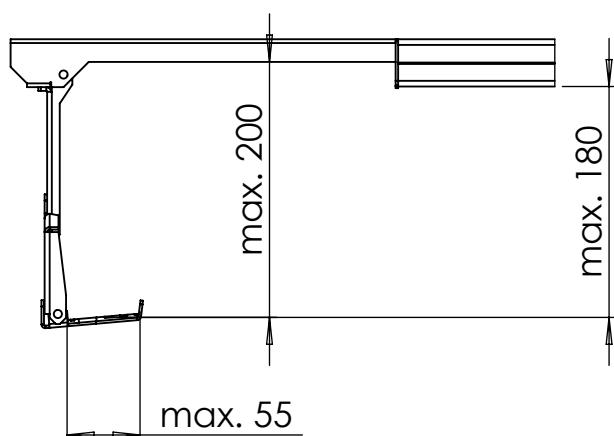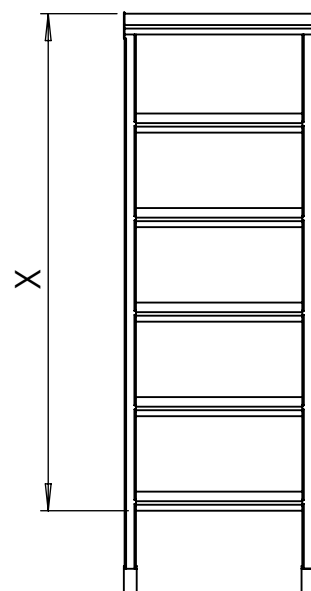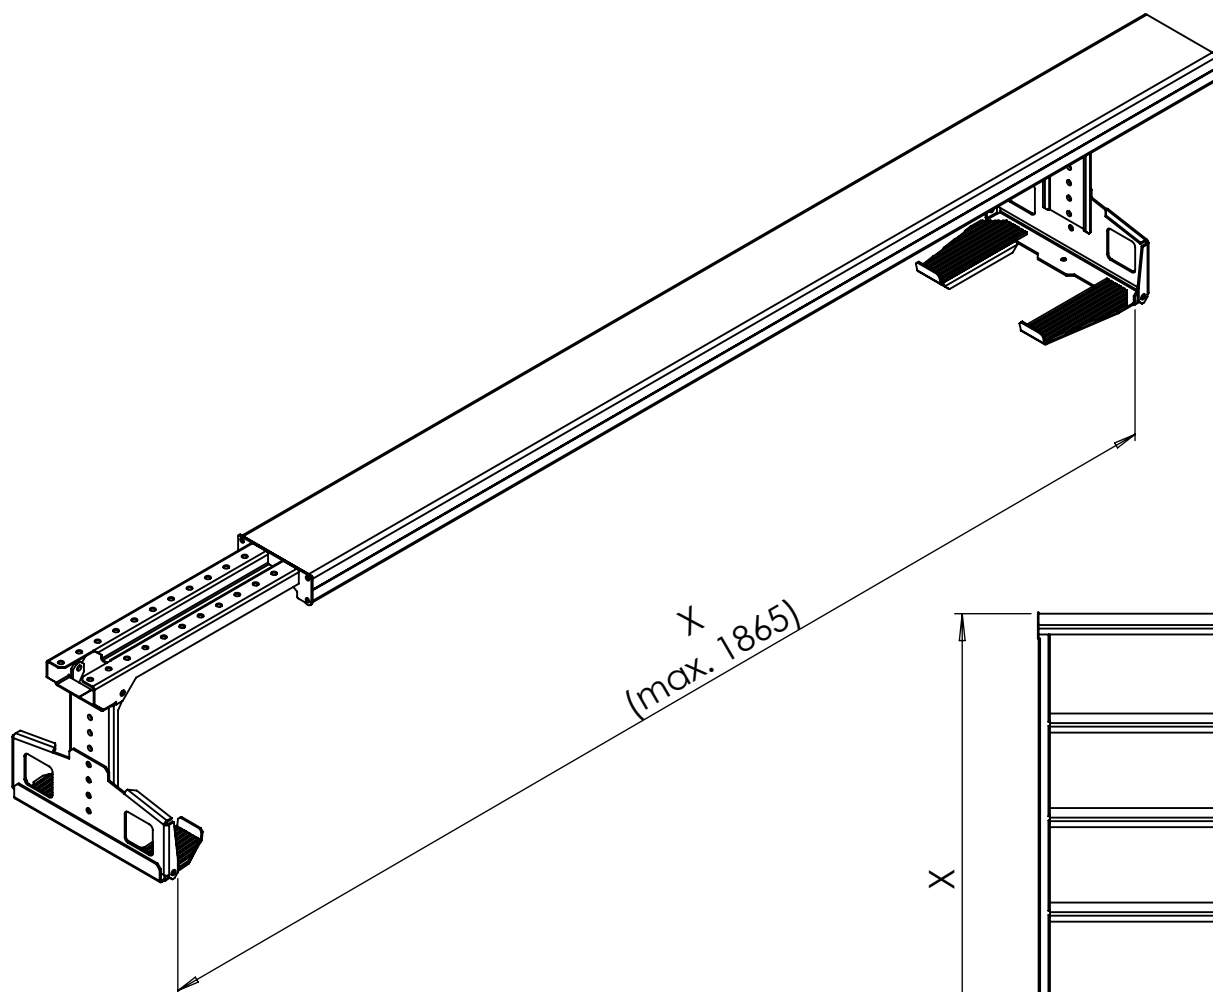

SYSTEM 
EDSTRÖM